Bathroom & floor trap leakage

TECHNICAL ILLUSTRATED GUIDE / 04

Different sources need different repairs.

01 Check the floor trap and pipe

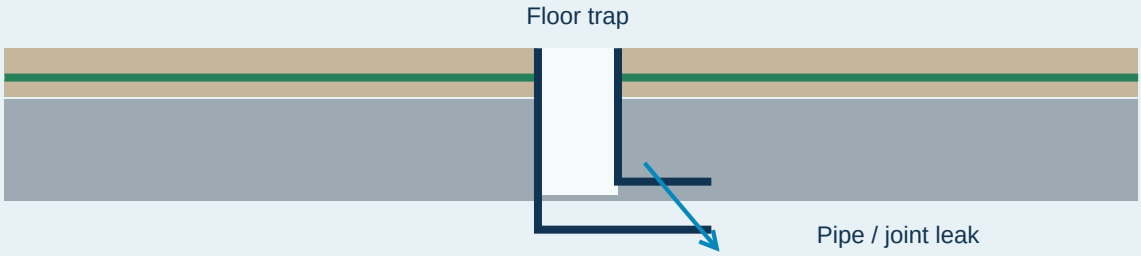

A leaking pipe or trap connection can cause wetness below even when the floor waterproofing is sound.

02 Check the waterproofing

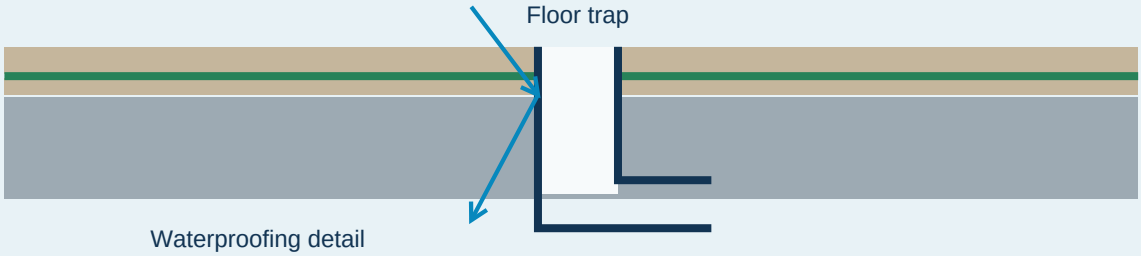

Water can pass through failed waterproofing or the seal around a floor outlet.

03 Isolate the source first

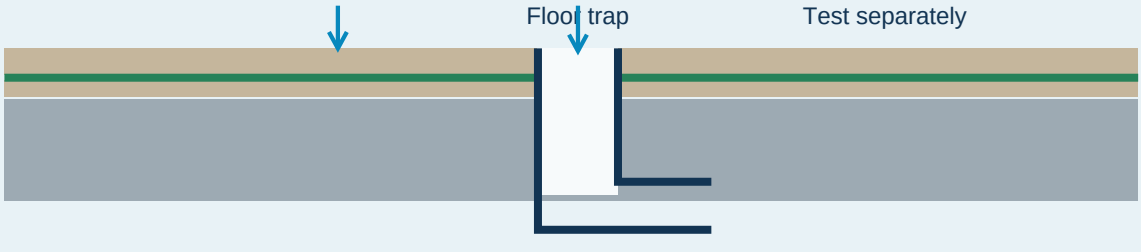

Test plumbing and floor areas separately where safe. Choose pipe repair, waterproofing or targeted injection only after diagnosis.

Conceptual illustrations only. Verify actual site conditions and product specifications.