Roof tile leakage

TECHNICAL ILLUSTRATED GUIDE / 05

Follow the rainwater path across the roof.

01 Check broken or displaced tiles

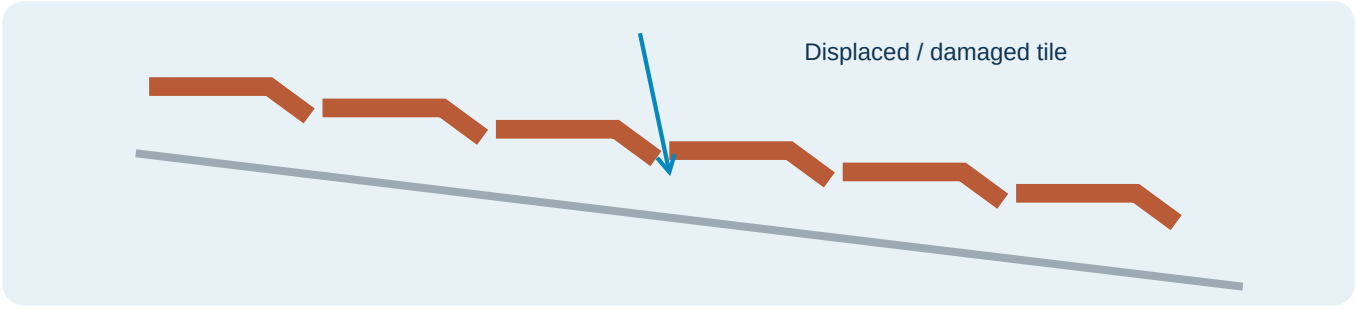

Damaged tiles can admit rain beneath the roof covering. Inspect the underlay where accessible.

02 Inspect ridge and valley details

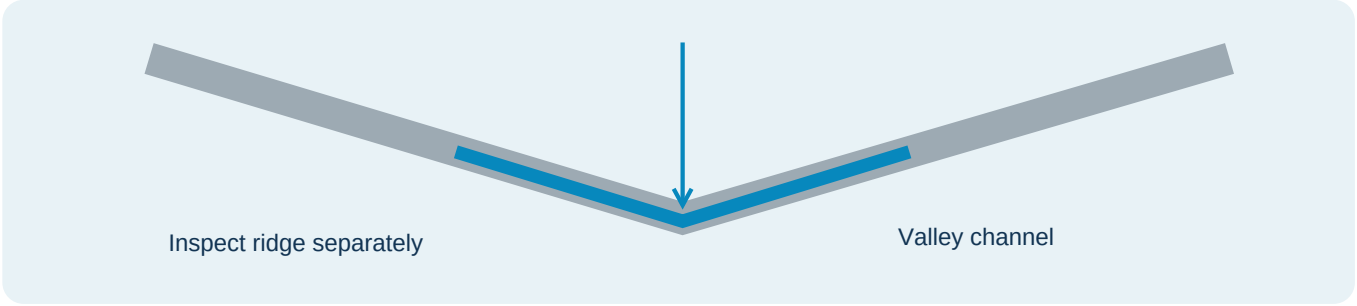

Cracked ridge bedding, failed seals, debris or damaged valley lining may allow water entry.

03 Check wall flashing

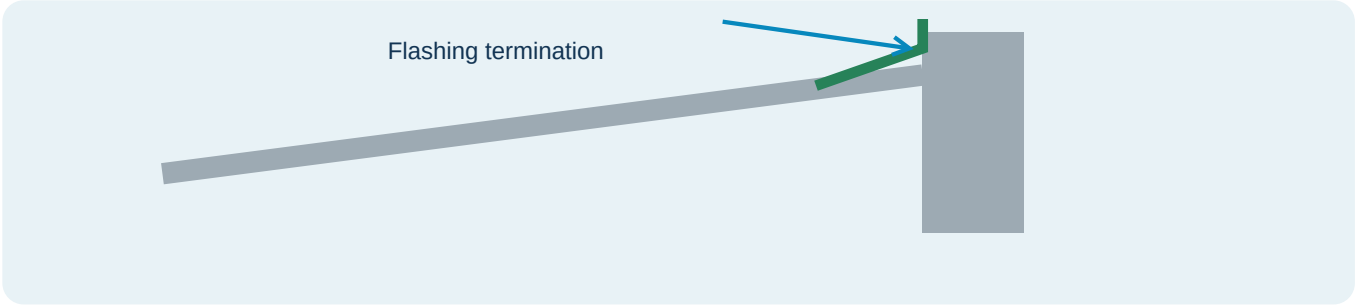

Rain can enter at a poorly sealed roof-to-wall junction. Repair the affected detail, not just the ceiling stain.

Conceptual illustrations only. Verify actual site conditions and product specifications.