Upturn & termination

TECHNICAL ILLUSTRATED GUIDE / 08

Protect the roof-to-wall junction.

01 Inspect the existing upturn

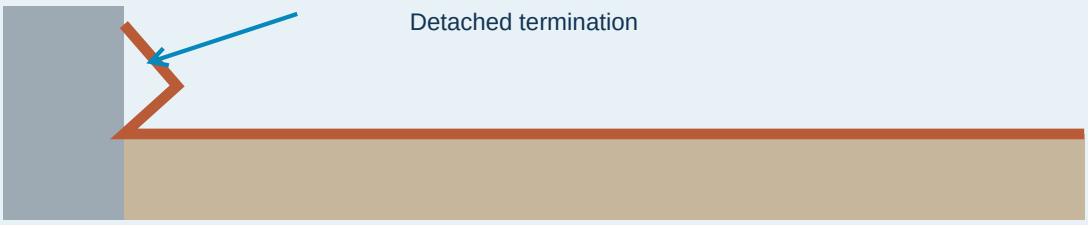

A detached or damaged termination can let water behind the waterproofing.

02 Repair the junction

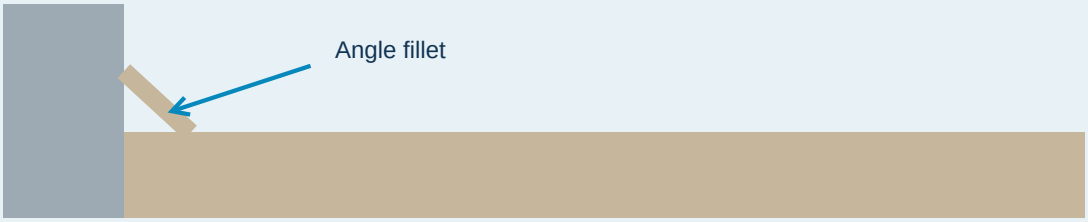

Remove failed material locally and form a suitable fillet where specified. Retain sound layers only if compatible.

03 Detail the new system

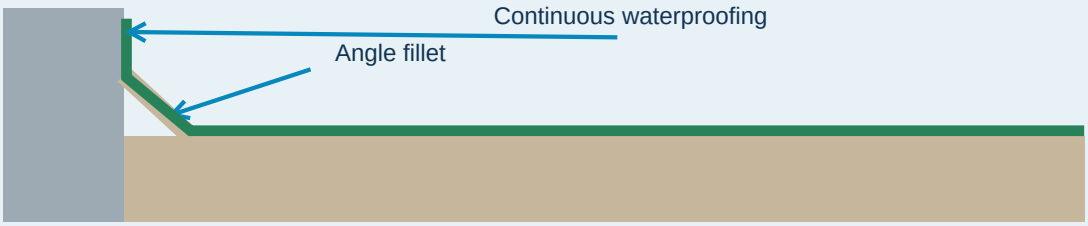

Continue waterproofing up the wall and terminate according to the system specification. Protect the upper edge.

Conceptual illustrations only. Verify actual site conditions and product specifications.